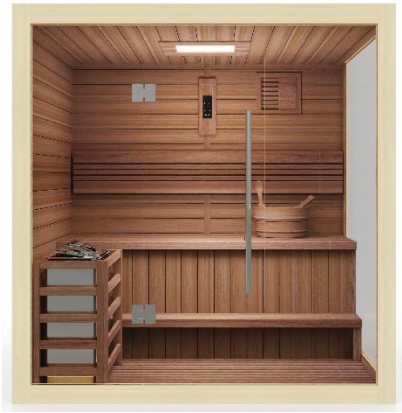
GoldenDesigns
Incorporated

## GDI-7202-01 / GDI-7203-01 / GDI-7206-01

## 2, 3 and 6 Person Steam Saunas


# OWNER'S MANUAL

**FOR STEAM MODEL SAUNAS**
**REQUIRES 240VAC /1PHASE (30/40AMP, depending on your electrical code) DEDICATED CIRCUIT FOR THE STOVE**
**REQUIRES 120VAC 15 AMP CIRCUIT FOR THE SAUNA**

***Please Note: The stove must be installed by a certified electrician per the manufacturer's manual. The stove must be installed per the electrical code in your area with reference to the breaker and wire sizes. The 6 ft. power cord for the lights/radio is located in the Accessory Box and plugs into the sauna at the rear. Model and parts are subject to change.***

**Thank you for the purchase of your new Steam Sauna! FOLLOW ALL INSTRUCTIONS AND BE CAUTIOUS OF SAFETY SYMBOLS. All electrical wiring must be performed by a qualified licensed electrician.** Do not use outdoor sauna models during rain storms.



**High Voltage Symbol**: Be cautious as there is the presence of a high voltage current that flows through the equipment!



**General Caution Symbol**: Be cautious as the equipment uses electrical current that can cause serious injury.

**ATTENTION** **⚠WARNING**

1. Please read this Operating Instruction Manual thoroughly before use. This will allow the user to become familiar with the operation of the control system. Please keep the Operating Instruction Manual available for future reference. If any technical assistance or repairing is needed, please contact the manufacturer.
2. The steam sauna must be installed indoors or can be installed outdoors within the protection of a structure that includes a water-proof roof protecting it from the outdoor weather elements. The sauna must be installed on a level water tolerable surface such as concrete or tile. **The entire floor panel of the sauna room must be completely level and well supported.** When not in use and placed outdoors, a water proof cover **must** be used to cover the sauna room.
3. To reduce the risk of electric shock and/or fire, do not expose the control system to direct water contact or rain. Do not open the cover to the control system as there are high tension fittings that can be dangerous. Only dealer authorized qualified technicians should make any needed or necessary repairs at any time.
4. Any repairs, alterations, or modifications to the control system are not authorized unless by an approved repair technician. Any non-authorized repairs, alterations, or modifications can lead to serious injuries and can cause the unit to work outside its intended specifications parameters.
5. Any non-authorized repairs, alterations, or modifications will void the warranty.
6. Before connecting the unit to a power source, please make sure that all wires, cords, and connections are connected properly.
7. Make sure that the control system is in a well-ventilated and dry area. Do not place it next to any heat source, in direct sunlight, where there is any type of vibration, or in any damp or dusty environment. It should not be place in an area with other thermal-radiating objects.
8. When the equipment is not going to be used for an extended period of time, unplug the unit from the power source.
9. Allow 30 seconds between turning the control system “On” and “Off”. By allowing 30 seconds between powering the control system “On” and “Off” will prolong the life of the unit.

10. Confirm that you adhere to the correct power requirements of the control system. Connecting the control system to other than the required voltage can damage the control system and possibly cause serious injury. It is very important that the load parameters are consistent with that needed by the control system.
11. Canadian Red Cedar and its rich aroma can cause an extremely small percentage of the population to have an adverse reaction known as Multiple Chemical Sensitivity (MCS). While this is not a universally recognized disorder in the medical field, certain consumers have an adverse physical reaction to low levels of many common chemicals and cannot tolerate any aromatic oils, shampoos with perfumes infused or certain herbs with natural aromas. However, for the majority of the population, Canadian Red Cedar is the sauna wood of choice.
12. Being that the sauna will operate in different climates (some areas are colder than others), it is not recommended to use the traditional sauna above 190 degrees Fahrenheit / 88 degrees Celsius.

## CAUTION: Exit sauna immediately if you feel dizzy, sleepy, or any discomfort.

**The information provided in this Owner's Manual if for informational purposes only and may not be construed as medical advice or instruction. The information is not recommended for any particular treatment and in all cases, it is recommended that you consult with your medical physician before using. This product does not constitute or imply any medical endorsement. The pictures and diagrams shown within this Owner's Manual are representations of this model(s). Actual model may vary.**

## TABLE OF CONTENTS


| | |
|---|---|
| Product Introduction | 4 |
| Wall Panel Descriptions | 4 |
| Highlights | 6 |
| Assembly Diagram | 8 |
| Schematics | 11 |
| Assembly Instructions | 14 |
| Sauna Control Panel | 21 |
| Control Panel Operation | 22 |
| Maintenance | 23 |
| Tips for Using Your Sauna | 23 |
| Safety Instructions | 24 |
| Safeguards for Your Sauna | 25 |
| Warranty | 26 |
| Warranty Registration | 28 |


**WARNING: Visually inspect all parts before assembly to make sure they are not damaged. Any excessive vibrations during transport could cause damage to the sauna components. DO NOT START the sauna if damage is detected! Contact your dealer or manufacturer for troubleshooting and replacement parts.**

**PLEASE NOTE: The pictures and diagrams shown within this owner's manual are representations of this model. Actual model may vary. Design and construction are subject to change. The sauna cannot be placed directly in the weather elements. It is highly recommended to keep the weather elements from reaching the sauna by placing the sauna under a covered patio or structure with a roof to fully protect the sauna.**

## 1. Product Introduction

The steam sauna room is composed of a wood cabin. The wood cabin includes a FRONT WALL PANEL with GLASS, REAR WALL PANEL, LEFT SIDE WALL PANEL, RIGHT SIDE WALL PANEL with Glass, FLOOR PANEL, ROOF, and BENCHE(S). Other smaller wood items will also be included and can be identified in the schematics on pages 4, 6, and 8.

## 2. Wall Panel Descriptions

**A.** The REAR WALL PANEL can be seen in the image below. It will have the control panel for the radio and lights on the interior. It will also have the vent to the right of the control panel. (see Figure 1)

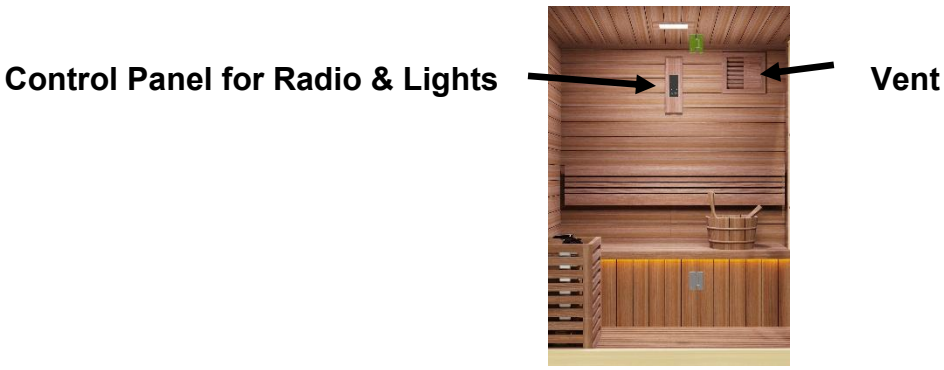



**Figure 1**

**B.** The LEFT SIDE WALL PANEL will have a vent near the bottom of the wall for the stove ventilation. The RIGHT SIDE WALL PANEL will have a stationary glass panel. The FRONT WALL PANEL will have the GLASS DOOR. (see Figure 2)

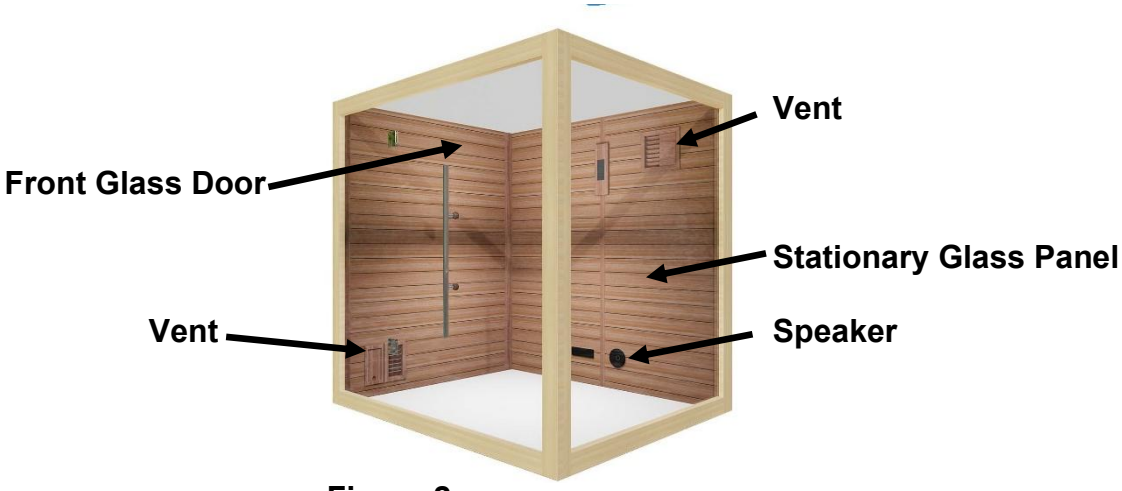



**Figure 2**

**NOTE: The pictures and diagrams shown above/below are for representational purposes only. Actual model may vary. Parts subject to change.**

## Highlights

### I. Buckles

#### A. External Buckles

The external buckles are used to connect the LEFT and RIGHT SIDE PANELS to the REAR PANEL. (see Figure 3)

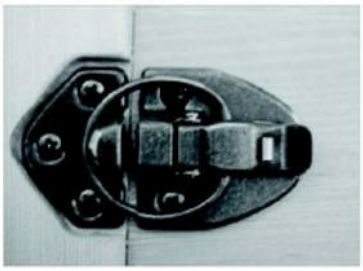


**Figure 3**

#### B. Guide and Guide Inserts

The guide and guide inserts are used to connect the FRONT PANEL to the RIGHT SIDE PANEL and the LEFT SIDE PANEL. (see Figure 4)

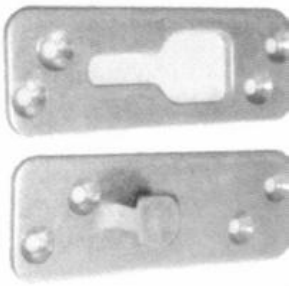


**Figure 4**

### II. Panel Descriptions

For easier assembly, please understand and distinguish the differences between each panel.

#### A. Floor Panel

The floor panel will be a lattice piece of wood and it will not cover the entire floor (does not cover under the bench). (see Figure 5)

**FLOOR PANEL**



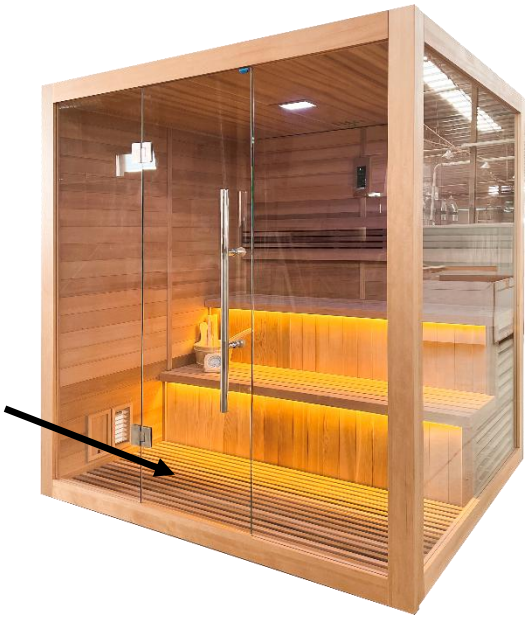


**Figure 5**

**B. Understanding the Difference Between the Top and Bottom of the Wall Panels**

The (4) Wall Panels will have white plastic feet on the bottom of the wall panels. (see Figure 6)

**Plastic Feet are on the Underside of the Wall Panels**



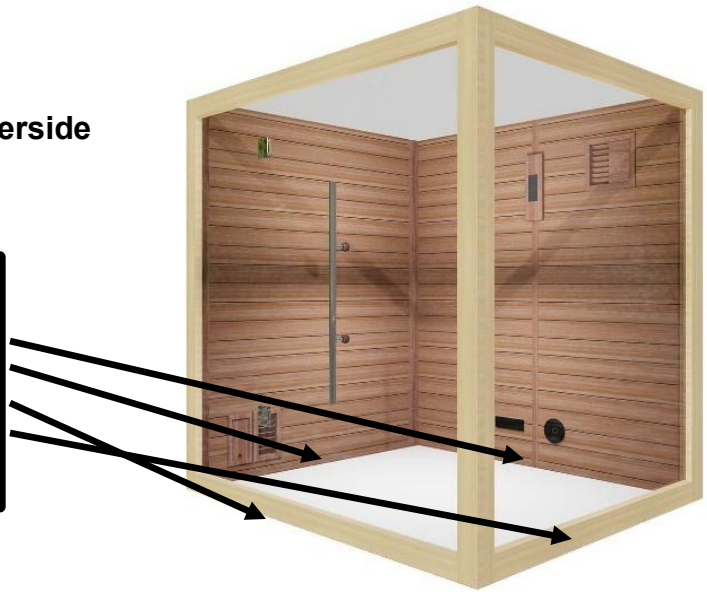


**Figure 6**

## READ ALL INSTRUCTIONS THOROUGHLY BEFORE ASSEMBLY

## GDI-7202-01



***The above assembly diagram is for quick reference only. Read all instructions before assembling. All sauna models may not be shown. Parts and accessories may vary.**

## READ ALL INSTRUCTIONS THOROUGHLY BEFORE ASSEMBLY


## GDI-7203-01



***The above assembly diagram is for quick reference only. Read all instructions before assembling. All sauna models may not be shown. Parts and accessories may vary.**

## READ ALL INSTRUCTIONS THOROUGHLY BEFORE ASSEMBLY


## GDI-7206-01

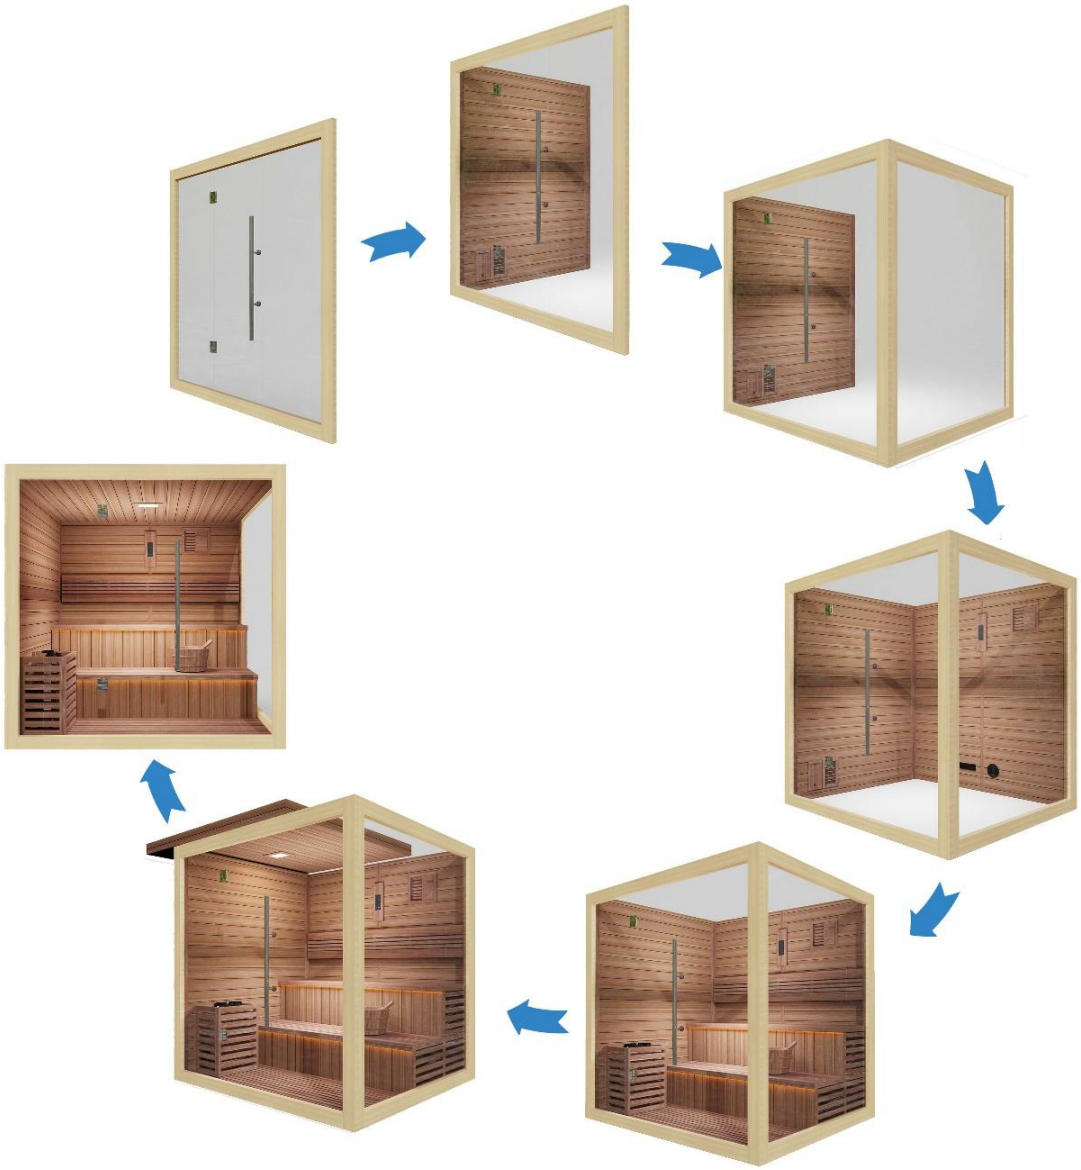

***The above assembly diagram is for quick reference only. Read all instructions before assembling. All sauna models may not be shown. Parts and accessories may vary.**

## READ ALL INSTRUCTIONS THOROUGHLY BEFORE ASSEMBLY

## Schematics

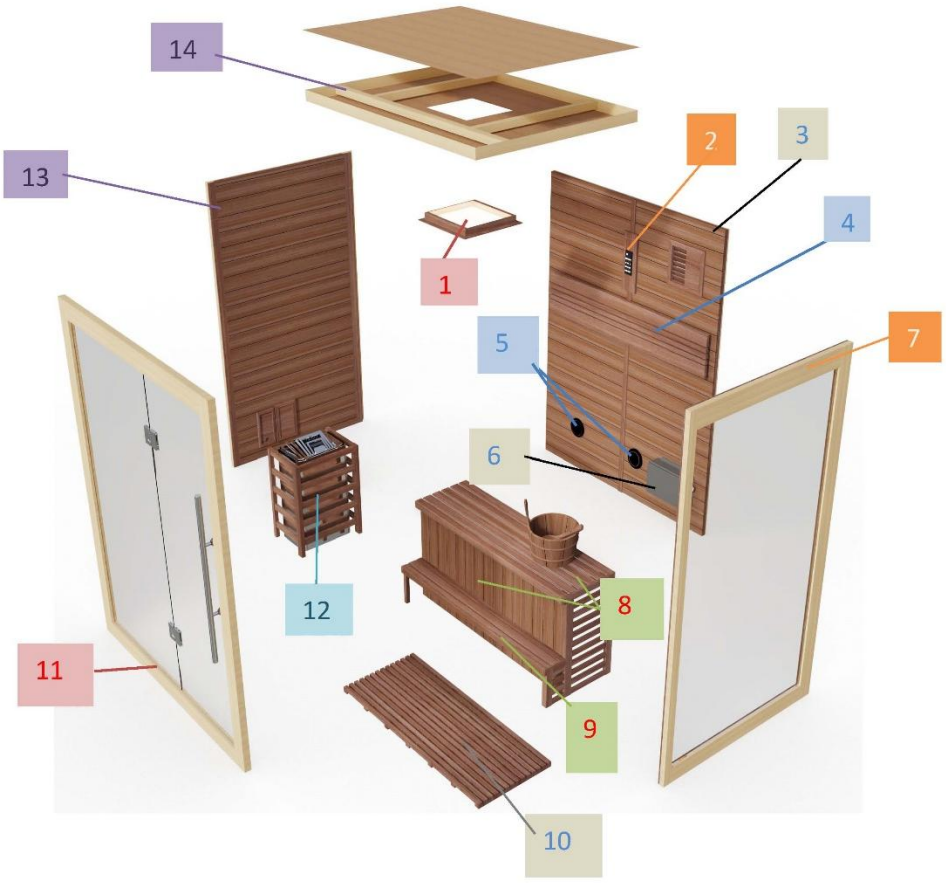



| GDI-7202-01 | |
|---|---|
| NO. | Name |
| 1 | Oversized red light color light |
| 2 | Control panel |
| 3 | Rear wall panel |
| 4 | Backrest |
| 5 | Speakers |
| 6 | Power supply |
| 7 | Right side wall panel |
| 8 | Bench & Bench support |
| 9 | Step |
| 10 | Floor panel |
| 11 | Front wall panel |
| 12 | Stove |
| 13 | Left side wall panel |
| 14 | Roof panel |

***The above assembly diagram is for quick reference only. Read all instructions before assembling. All sauna models may not be shown. Parts and accessories may vary.**

## READ ALL INSTRUCTIONS THOROUGHLY BEFORE ASSEMBLY


## Schematics

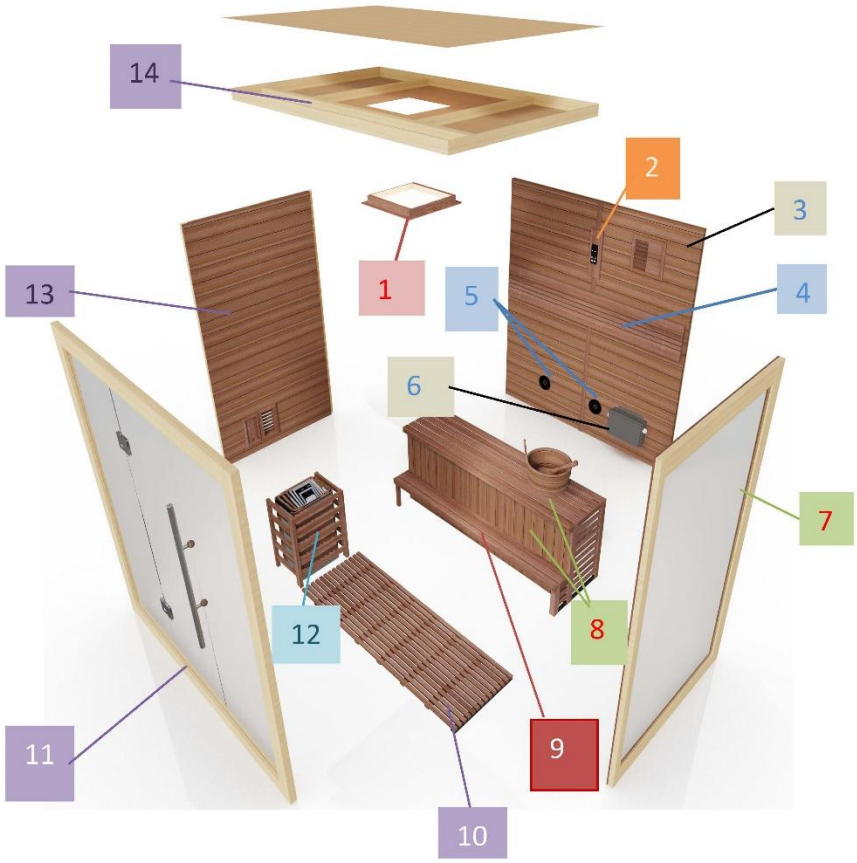


| GDI-7203-01 | |
|---|---|
| NO. | Name |
| 1 | Oversized red light color light |
| 2 | Control panel |
| 3 | Rear wall panel |
| 4 | Backrest |
| 5 | Speakers |
| 6 | Power supply |
| 7 | Right side wall panel |
| 8 | Bench & Bench support |
| 9 | Step |
| 10 | Floor panel |
| 11 | Front wall panel |
| 12 | Stove |
| 13 | Left side wall panel |
| 14 | Roof panel |

***The above assembly diagram is for quick reference only. Read all instructions before assembling. All sauna models may not be shown. Parts and accessories may vary.**

## Schematics

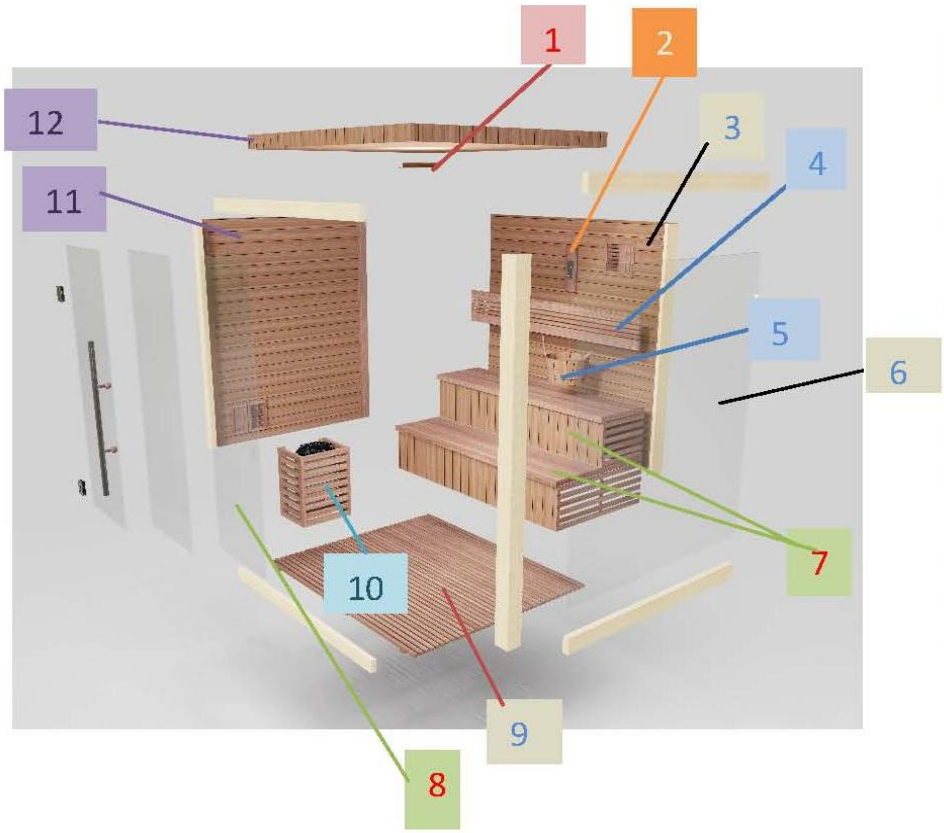


GDI-7206-01

| Ser. | Name |
|---|---|
| 1 | Oversized color light |
| 2 | Control panel |
| 3 | Rear wall panel |
| 4 | Backrest |
| 5 | Wood barrel & spoon |
| 6 | Right side wall panel |
| 7 | Bench & Bench support |
| 8 | Front wall panel |
| 9 | Floor panel |
| 10 | Stove |
| 11 | Left side wall panel |
| 12 | Roof panel |
| | |

***The above assembly diagram is for quick reference only. Read all instructions before assembling. All sauna models may not be shown. Parts and accessories may vary.**

## CAUTION: Exit sauna immediately if you feel dizzy, sleepy, or any discomfort.

### Assembly Instructions

**A. Choose a good location to install the sauna**

1. The location must be dry, leveled, and away from any source of water.
2. The stove must be installed by a certified electrician.
3. Two adults are required for installation on model GDI-7289-01 and three adults for installation on models GDI-7389-01/GDI-7689-01.
4. Wood cabin installation order: FRONT WALL PANEL ▸ LEFT SIDE WALL PANEL ▸ RIGHT SIDE WALL PANEL ▸ FLOOR PANEL ▸ REAR WALL PANEL ▸ BENCH SUPPORT PANELS ▸ BENCH ▸ BACK BACKREST ▸ ROOF PANEL
5. Tools Required: Battery Operated Screwdriver or Hand-Held Philips Screwdriver, Rubber Mallet, and Ladder.

**B. Installing the FRONT WALL PANEL and LEFT SIDE WALL PANEL**

1. Place the FRONT WALL PANEL upright and in the desired location. Next, stand the LEFT SIDE WALL PANEL upright and next to the FRONT WALL PANEL. Align the metal Guide Insert Brackets on the LEFT SIDE WALL PANEL and the FRONT WALL PANEL. Now you will need to lift the LEFT SIDE WALL PANEL up and onto the FRONT WALL PANEL locking the metal Guide Insert Brackets into one another. (see Figure 7)



**Figure 7**

## C. Installing the RIGHT SIDE WALL PANEL, FLOOR PANEL and REAR WALL PANEL

1. Place the RIGHT SIDE WALL PANEL upright and next to the FRONT WALL PANEL. Align the metal Guide Insert Brackets on the RIGHT SIDE WALL PANEL and the FRONT WALL PANEL. Now you will need to lift the RIGHT SIDE WALL PANEL up and onto the FRONT WALL PANEL locking the metal Guide Insert Brackets into one another. Next, place the FLOOR PANEL on the floor and next to the FRONT WALL PANEL. The REAR WALL PANEL can now be placed up against the RIGHT SIDE WALL PANEL and LEFT SIDE WALL PANEL. You will use the buckles to latch the REAR WALL PANEL to both the RIGHT SIDE WALL PANEL and LEFT SIDE WALL PANEL. (see Figure 8)

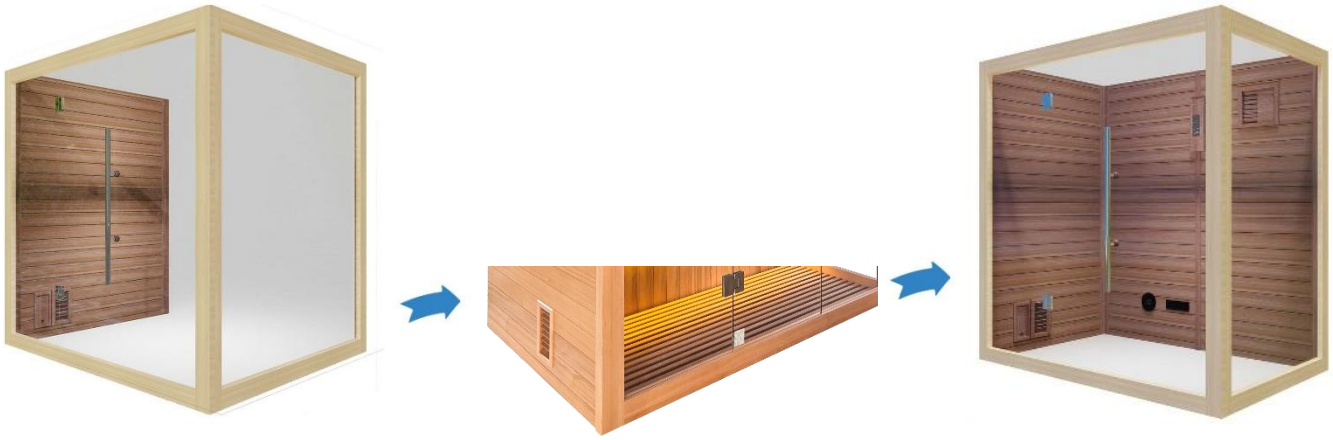


**Figure 8**

## D. Installing the SIDE BENCH SUPPORT PANEL, BENCH SUPPORT PANEL, BENCH, BACKREST, and STEP

1. First, you will need to locate the SIDE BENCH SUPPORTS. See Figure 9. The SIDE BENCH SUPPORTS will be the same for sauna models GDI-7202-01 & GDI-7203-01. The SIDE BENCH SUPPORT for sauna model GDI-7206-01 will be different. The SIDE BENCH SUPPORT will need to be screwed to the RIGHT SIDE WALL PANEL using the 1 7/8” screws. The SIDE BENCH SUPPORT will have predrilled holes.

**SIDE BENCH SUPPORTS**



**For GDI-7202-01**
**&**
**GDI-7203-01**



**BENCH SUPPORT PANEL will slide within the vertical slot on the SIDE BENCH SUPPORTS**



**For GDI-7206-01**



**Figure 9**

2. It is time to locate the BENCH SUPPORT PANEL. Depending on your sauna model will determine how many BENCH SUPPORT PANELS you have. For sauna models GDI-7202-01 and GDI-7203-01, you will have only one BENCH SUPPORT PANEL. For sauna model GDI-7206-01, you will have two BENCH SUPPORT PANELS. The BENCH SUPPORT PANEL will side downward within the vertical slots on both the LEFT SIDE WALL PANEL and the SIDE BENCH SUPPORT PANEL(S) (see Figure 10)

**GDI-7202-01**

**&**

**GDI-7203-01**





**BENCH SUPPORT PANELS**

**GDI-7206-01**





**Figure 10**

3. See Figure 10 and locate the BACKREST. You will need to screw the BACKREST to the wood plank on the REAR WALL PANEL. (see Figure 11)



**Wood Plank on REAR WALL PANEL**



**Installing BACKREST**



**Predrilled screw holes**

**Figure 11**

4. For models GDI-7202-01/GDI-7203-01, locate the STEP. Place the STEP in front of the BENCH SUPPORT PANEL and used the provided screws to screw to secure in place. (see Figure 11a)

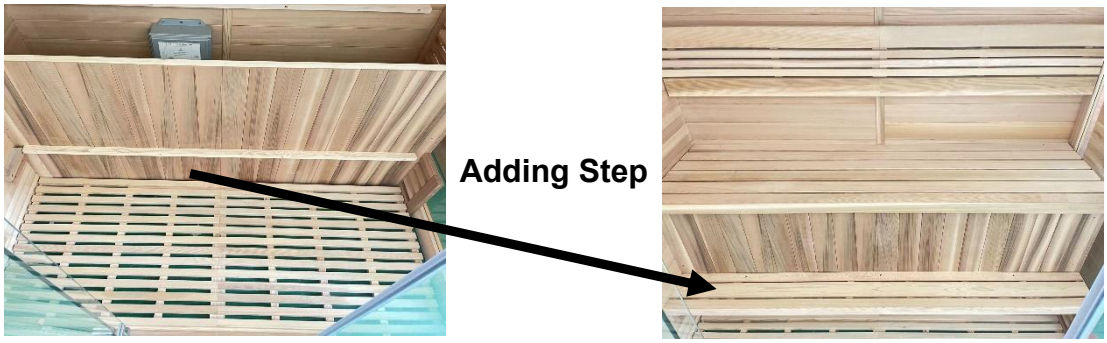



**Figure 11a**

## I. Installing the GLASS DOOR HANDLE and ROOF PANEL

1. Locate the GLASS DOOR HANDLE. The GLASS DOOR will need to sit between the plastic washer (on the outside) and the wood handle (on the inside). (see Figure 12)
2. Place the ROOF PANEL over the wall panels carefully. Be cautious when feeding the wires for the lights from the REAR WALL PANEL to the top of the ROOF PANEL. (see Figure 13)
3. Next, carefully slide the ROOF PANEL into place. You will need to connect the background light wire connections at the REAR WALL PANEL up on the rooftop. The blue antenna wire can lay across the rooftop. Next, place the ROOF COVER over the top of the sauna room. When the edges are aligned, screw the ROOF COVER to the ROOF PANEL with the provided ¾" screws.
4. It is optional to use the 1 7/8" screws to screw the roof panel to the side wall panels.

**Exterior Side:**
**(metal handle + Metal Ring + Plastic Washer)**



**Interior Side:**
**(wood handle)**

**Figure 12**



**Figure 13**

**Note: Be sure to remove the black plastic protection corners from around the glass door corners, if present.**

### J. Installing the Stove

**Please Note: The stove must be installed by a certified electrician per the manufacturer's manual. The stove must be installed per the electrical code in your area with reference to the breaker and wire sizes & wire material. Be sure to follow the manufacturer's manual for proper and safe installation of the stove. <u>For the Harvia The Wall Heater, it is very important to run the stove power cord through the vent hole in the wall panel and close the vent before installing the stove as you will not be able to open the vent once the stove is installed. See Figure 14.</u> After the stove is mounted, you can install the wood housing for the stove. The wood housing does vary in styles.**

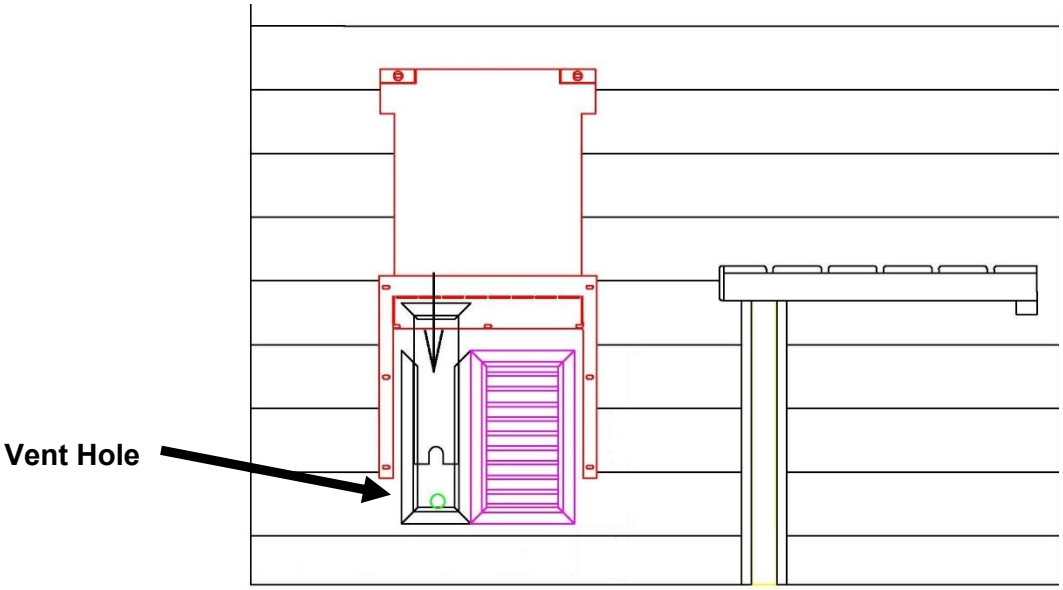



**Figure 14**

1. First, you will need to locate the wood housing for the stove and assemble it using the provided screws. (see Figure 15)

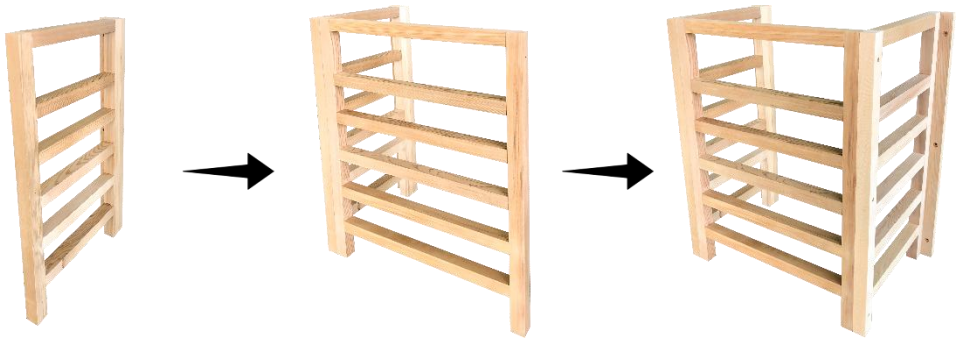


**Figure 15**

2. Next, you will need to mount the wood housing to the sauna wall panel using the provided screws. You will install the wood housing around the stove as the stove does get very hot. (see Figure 16)



**Figure 16**

## ASSEMBLY COMPLETED!

# SAUNA CONTROL PANEL - GENERAL INTRODUCTION

1. **Electrical Parameters:**

| Functions | |
|---|---|
| Touch Key Technology | √ |
| FM Radio | √ |
| Roof Lights | √ |
| Chromotherapy Lighting | √ |
| Bluetooth Music Play | √ |

2. **Control System Specifications:**

A.) Rated Voltage: AC110V-AC240V
B.) Bluetooth Approximate Effective Distance: 10 feet
C.) Rated Power: 50Hz/60Hz

3. **Devices controlled by the Control System are:**

A.) Roof Lights
B.) Chromotherapy Lighting
C.) Radio/Bluetooth

4. **Control Panel Display:**



# CONTROL PANEL OPERATION

**1.** The Power Button "  " powers the control panel. Press the "  " button to turn the control panel ON/OFF. Once you press the "  ", the display will show " - - - - " and the Chromotherapy Light will turn ON.

**2.** Press the "  " button (at the right side of the control panel) to turn the Roof Lights ON/OFF.

**3.** Press the "  " button (at the left side of the control panel) to turn the Chromotherapy Light ON/OFF. If not already, you will need to insert the batteries into the remote. Use the remote to change the colors of the Chromotherapy Light. You can press any of the color buttons on the remote and that color will be displayed. You can use the shade button on the remote to go through a sequence of colors. If you want to turn the Chromotherapy Light OFF during your session, you can press the POWER button on the remote. The Red Light Therapy feature works with the Chromotherapy Light. When the Chromotherapy Light is ON, you can press the White Light button at the bottom right of the remote once and the Chromotherapy Light will change from the existing color to the White Light/Reading Light. Pressing the White Light button again will turn ON the Red Light Therapy feature. To exit the Red Light Therapy feature and return back to the White Light/Reading Light, just press the White Light button at the bottom right of the remote again and the White Light/Reading Light will be displayed. Now once again you can press any of the color buttons on the remote and that color will again be displayed. **Please note: You must be inside the sauna room for the remote to work.**



**4.** Press the “  “ button to enable Bluetooth and the screen will display “bLU”. Please note that no password is needed during the Bluetooth pairing. Press the “**TUN-**“ and “**TUN+**” to select a song. Press the “VOL-“ and “VOL+” to adjust the volume.

**5.** Press the “**FM**” button to select the radio function or to turn the radio OFF. Once you press the “**FM**” button is pressed, the LED display will show the radio station. Press the “**TUN-**“ and “**TUN+**” to scroll through the radio stations or press and hold the “**FM**” button to search through the stations automatically. Press the “VOL-“ and “VOL+” to adjust the volume. The control panel radio tuner does have a simple antenna system and may not pull in all radio stations in your area.

**6.** If the user does not press any buttons for longer than 3 minutes, the control panel will “lock” as a safety feature. When pressing any buttons on the control panel after the 3 minutes, the screen will display “**LOC**”. To unlock the control panel, press and hold the “  “ button.

# CAUTION: Exit sauna immediately if you feel dizzy, sleepy, or any discomfort.

## Maintenance:

With regards to maintenance, you do not want to use any liquid cleaners or aerosol cleansers inside the sauna. Unplug the sauna from the wall outlet before cleaning. Use plain water and a soft cloth for cleaning. Clean floor heater regularly to keep free of debris. ***Do not use benzene, alcohol, or strong cleaning chemicals in or on the sauna. NOTE: Any chemical that can damage wood or be absorbed into the wood will damage the sauna.***

### Tips for using Your Sauna

1) If you take a hot/warm shower or bath before using your sauna, you may perspire more and experience more comfort.
2) Drink water prior to, during, and after your sauna session to replenish body fluids.
3) To regulate the set temperature inside the sauna to your comfort level, use the movable ventilation or leave the door open slightly. The ventilation is installed on the sauna and used based on personal preference.
4) Use 2 or 3 towels during your sauna session. Fold one of the towels several times and place it on the bench. This towel will absorb some of your perspiration while adding comfort as you sit on the bench. Place another towel on the floor to absorb perspiration as it falls from your body. Use a third towel to wipe perspiration from your body from time to time.

5) At the first sign of a cold or flu, increasing your sauna sessions may be beneficial in boosting your immune system and decreasing the reproductive rate of viruses.
6) To help relieve sore and tense muscles, massage the affected areas during your sauna session.
7) To treat your ankles and feet more effectively, you can elevate them and move them close to one of the heat emitters to achieve a deep heating effect.
8) The peaceful and relaxed state rendered by a sauna session may help you to sleep easier and deeper.
9) To protect the life of the stove, you can shut off the circuit breaker when not in use.
10) After the sauna session is over, do not jump into the shower or bath immediately. Because your body was heated up during the sauna session, it will continue to perspire even after you exit the sauna room. Sit in the sauna with the door open slightly and let your body cool down. Once your body has cooled down and you feel comfortable, you can exit the sauna. After about twenty minutes and when your body has completely cooled down, you can take a shower to rinse the perspiration off your body.

## Safety Instructions

1.) Read and follow all instructions carefully before using the sauna.
2.) When installing and using the electrical equipment, safety precautions should always be followed.
3.) To reduce the risk of injury, do not allow children to use the sauna unless they are directed by a medical doctor and are closely supervised at all times by an adult.
4.) Do not use the sauna immediately following strenuous exercises. Wait at least 30 minutes to allow the body to cool down completely.
5.) Pregnant or possibly pregnant women should contact their physician prior to using the sauna. Excessive temperature has a high potential for causing fetal damage during pregnancy.
6.) **Hyperthermia Danger**: the normal body temperature can't rise above 39°C (103°F). Symptoms of excessive hyperthermia include dizziness, lethargy, drowsiness, and fainting. The effects of excessive hyperthermia may include failure to perceive heat, physical inability to exit sauna, unawareness of impending hazard, unconsciousness and fetal damage in pregnant women. Hyperthermia could make your body's core temperature rise. Setting desired temperature to an excessively high temperature is not recommended.
7.) The use of alcohol, drugs, or medications prior to or during the sauna session may lead to unconsciousness and/or other harmful physical injuries.
8.) Persons suffering from obesity or with a medical history of heart disease, low or high blood pressure, circulatory system problems, or diabetes should consult a physician prior to using the sauna.
9.) Persons using medications should consult a physician before using the sauna. Some medications may induce drowsiness while others may affect the heart rate, blood pressure, and/or blood circulation.
10) Exercise care before and after sauna use.
11) Never sleep inside the sauna.

12) Do not use any type of cleaning agents on the interior of the sauna. Only wipe down with a cloth and water.
13) Do not stack or store any object on top or inside the sauna.
14) If the power supply cord becomes damaged, it must be replaced immediately by the manufacturer or its agent. If you find the power cord is too hot or that the electrical equipment may be experiencing technical problems, please contact the manufacturer or its agent immediately to avoid hazardous conditions.
15) Do not use the sauna during an electrical storm to avoid risk of shock.
16) Do not touch the glass door hinges during sauna use as they become very hot to the touch.
17) Your hands must be dry and free of moisture before plugging and unplugging cords and wiring harnesses from the power supply and circuit boards. Never operate the sauna with wet hands or wet feet to avoid risk of electric shock. Never touch the metal prongs of the plug.
18) Do not attempt to make any repairs yourself without contacting the manufacturer first. If a problem occurs with the sauna, please contact seller, distributor, or the manufacturer to avoid safety risks. Unauthorized repair attempts will void the manufacturer's warranty.
19) Please make sure the outlet power supply meets the specifications required. Failure to meet the requirements may cause safety risks.
20) Some sauna models are equipped with reading and roof lamps. Because the lamp temperature will become very hot once powered on, do not attempt to touch the lamp to avoid being burned. Do not attempt to touch it for at least 20 minutes after it has been powered off.
21) Do not bump, hit, or break the stove as it may cause an electrical short and pose a safety risk.
22) Do not make any modifications to the sauna, the sauna structure, or the sauna components.
23) Prior to each sauna session, the sauna room is to be inspected for correct operation. If for any reason your sauna room does not seem to be operating properly, discontinue use and contact the manufacturer.

## Safeguards For Your Sauna

1. Do not install the sauna near water, near a bathtub, near a shower, in a wet basement, or near a swimming pool.
2. Do not use liquid cleaners or aerosol cleansers inside the sauna. Unplug the sauna from the wall outlet before cleaning. Use plain water and a soft cloth for cleaning.
3. The power supply cord should be routed so that it is not walked on or pinched by any object that may be placed against it.
4. When replacement parts are required, be sure they meet the specified requirements of the manufacturer. Unauthorized substitutes may result in fire, electric shock, or other hazardous conditions. After any repairs, please ask the service technician to perform safety checks to determine that your sauna is working properly.
5. Do not use any wall receptacle adapter or extension cord between the sauna cord and wall receptacle.

# Limited Lifetime Warranty

***Limited Lifetime Warranty**: Golden Designs, Inc. warranties the sauna room and its attached electronics against defects in material and workmanship for the life of the product from the original date of purchase. **This sauna is for indoor use or outdoor use when protected from the outdoor weather elements by a structure that includes a water-proof roof. When not in use and placed outdoors, a water proof cover must be used to cover the sauna room or the warranty will become void. Any damage due to direct exposure to outdoor weather elements such as rain, snow, sun, wind or extreme temperatures will not be covered by this warranty. Any damages as a result of modifications made to the sauna or its components will void this warranty.**

**Extent of Warranty:** This limited warranty applies to products manufactured or distributed by Golden Designs, Inc. under the Golden Designs Inc. brand name, delivered in the continental United States or Canada and extends to the original purchaser at the original site of installation only. This warranty becomes valid at time of purchase and terminates either by specified time frame, owner transfer, or relocation. The warranty extends to the sauna room and excludes the stove as it is covered by its own manufacturer warranty. **Your sales receipt showing the date of purchase of the product is your proof of purchase.**

**Manufacturer Warranty**

All Golden Designs, Inc. products are manufactured with the highest quality appliances and are warranted to be free from defects in material and workmanship at the time of delivery. The appliance warranty is extended through the manufacturer for the product including, but not limited to: sauna control panel and connected wire harnesses. All exchanged parts and products replaced under this warranty will become the property of Golden Designs, Inc. Golden Designs, Inc. reserves the right to change for any part not covered under the existing warranty. Any parts determined to be defective must be returned to Golden Designs, Inc. at its discretion to obtain warranty service. You must prepay any shipping charges, export taxes, custom duties and taxes, or any other charges associated with the transportation of the parts. In addition you are responsible for insuring any parts shipped or returned. You must present Golden Designs, Inc. with proof of purchase documents (including the date of purchase). Any evidence of alteration, erasing or forgery of proof of purchase documents will be cause to **VOID** this limited warranty. Products on which the serial number has been defaced or removed is not eligible for warranty service.

**Warranty Limitations**

This warranty does not apply if the unit has been subject to full commercial use, negligence, alteration, modification, misuse, abuse, repairs by non-Golden Designs, Inc. authorized personnel, inappropriate installations, or any case beyond the control of Golden Designs, Inc. invalidating this warranty including but are not limited to:

- Use of lacquer or paints
- Sauna and other Golden Designs, Inc. products accessories placed on non-approved surfaces
- Outdoor applications when not protected from outdoor weather elements
- Normal wear and tear or weathering
- Use of product not in accordance with instructions

**Surface cracks are not considered defects in material or workmanship, as they are normal characteristics of all woods. This includes minor cracks due to wood expansion and contraction. Note:**

**Since the wood used in construction has been kiln dried, a certain amount of expansion and contraction occurs in the wood in a sauna environment.**

**Disclaimers**

Golden Designs, Inc. shall not be liable for loss of use of sauna or other Golden Designs, Inc. products or other secondary or incidental or consequential costs, expense or damages - which may include the removal of permanent structures or other custom fixtures or the necessity for crane removal - arising directly or indirectly out of the use or inability to use the product. Any implied warranty shall have duration equal of the applicable warranty stated above. Under no circumstances shall Golden Designs, Inc. or any of its representatives be held liable for injury to any person or damage to any property, however arising. Specifications are subject to change without notice or obligation.

**Legal Remedies**

This limited warranty gives you specific legal rights. You may have other rights, which may vary from state to state.

**Customer Service**

For customer service, contact your authorized dealer. If you need additional information or assistance, please email Golden Designs, Inc. at info@goldendesignsinc.com or call (909) 212-5555.

*Limited Lifetime Warranty of Sauna Products is 5 years on wood structure (when properly maintained), control panel, and applicable control panel harnesses and lights from the date of purchase. Stove/heater is covered under its manufacturer's applicable warranty.

# WARRANTY REGISTRATION

Congratulations on your purchase of an Infrared Sauna from Golden Designs, Inc. Please take the time to register your warranty using the QR Code:




If you do not have the QR Code Reader, you can also register at:

https://app.goldendesigninc.com/public/RegisteredProduct

Please include a copy of your sales receipt or packing slip when registering. The serial number (S/N) is located on the sauna's front panel, rear panel, or on the carton.

**The warranty must be registered within 60 days of the purchase date.**